


A United Volleyball Supply, LLC. Company • 14615 NE 91st ST, Bldg B, REDMOND, WA 98052 • 1996-2007© VOLLEYBALLUSA.COM

PH: 1-800-494-3933 • FAX: 425-827-2230

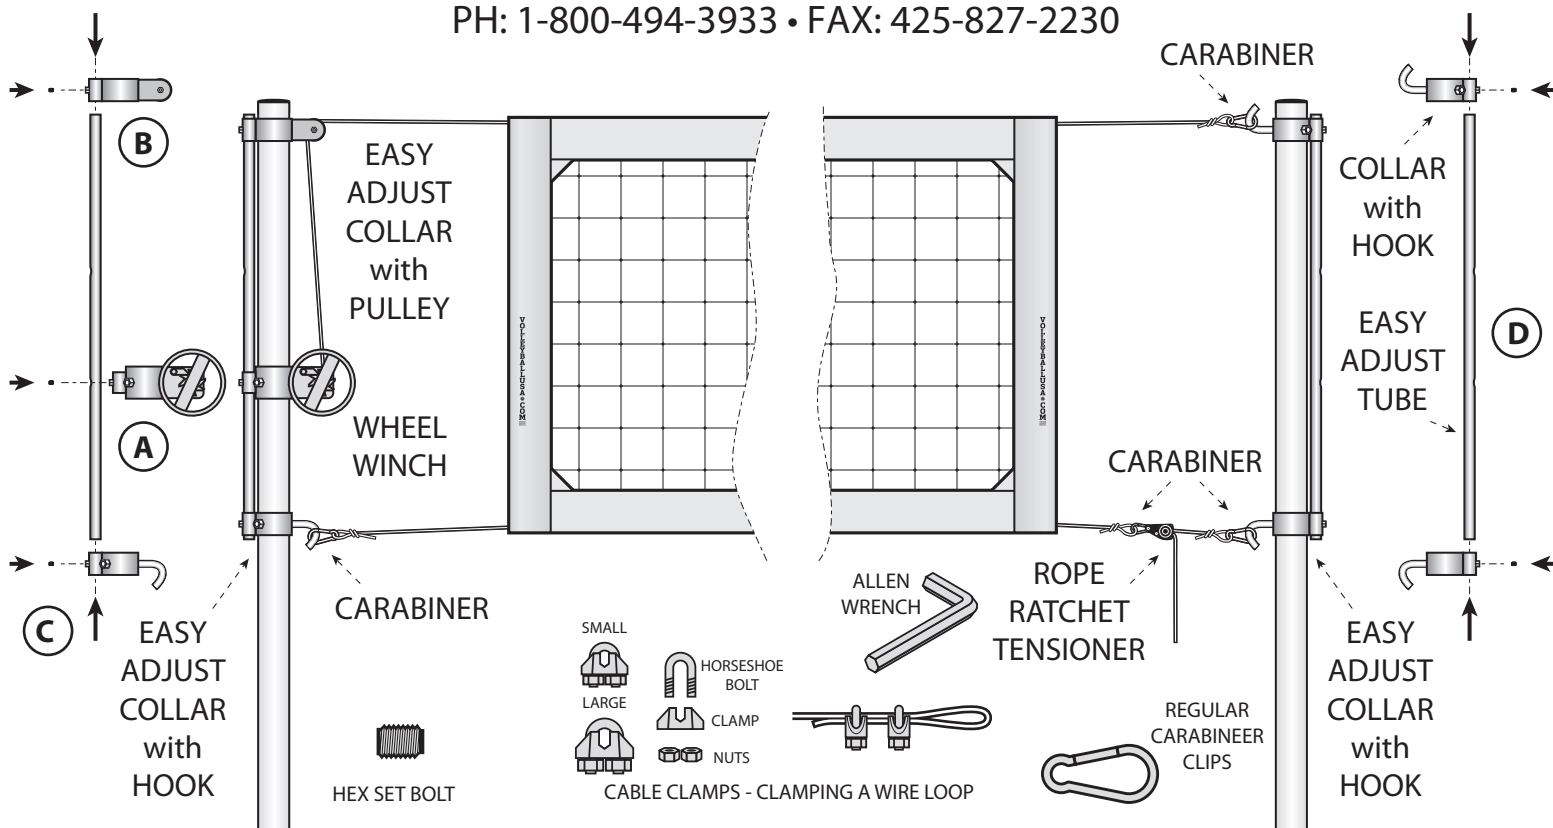

1) - Dig two 3 foot deep holes approximately 1 foot in diameter, 36 feet apart from each other on center.

2) - Cement poles (or sleeves, if purchased) 18 inches into the ground using four 80 pound bags of concrete around each pole or sleeve. This will allow 9 feet of pole above ground.

3) - If you ordered a net with steel cables, you will need to create a loop on one end using two cable clamps on each cable included on your net.

4) - Connect net as shown in illustration above.

5) - Easy adjust assembly:

A) - First, slide winch onto easy adjust tube and align small hex bolt to either hole along the tube, depending on where you prefer the winch. Tighten hex bolt with Allen wrench until winch stays in place.

B) - Slide easy-adjust collar with pulley on one end of the easy-adjust tube. This will be the top end of the assembly. Tighten small hex bolt.

C) - Slide easy adjust collar with hook on opposite end of the easy-adjust tube, hook facing away from the pulley end. Tighten small hex bolt. Be sure to align the collars and winch so collars will fit on volleyball pole. If collars are not aligned, loosen hex bolt and adjust.

D) - Slide remaining collars with hook on the oppo-

site ends of the other easy-adjust tube, hooks facing away from the tube center.


Men's net height are set at 8 feet from the top of the net to the ground, while women's net height are set at 7 feet, 8 inches. Co-Ed play height can be set at approximately 7 feet, 8 inches.

If you have a net with steel cable it is suggested to use the end with the factory made loops in conjunction with the pulley and winch.

6) - Feed factory made loop down through pulley and connect to the pin on the winch spool. On the other end of the volleyball net, use provided cable clamps to create another loop and connect to the powder coated hook on top collar. Turn wheel on the winch to tighten top of volleyball net.

7) - On the bottom of net, another loop will need to be made using the remaining cable clamps. Attach loop to powder coated hook. On the other end of the bottom of net, connect factory made loop on remaining powder coated hook. Tighten bottom net rope by pulling loose end from rope ratchet.

HOW TO TIE A LOOP KNOT

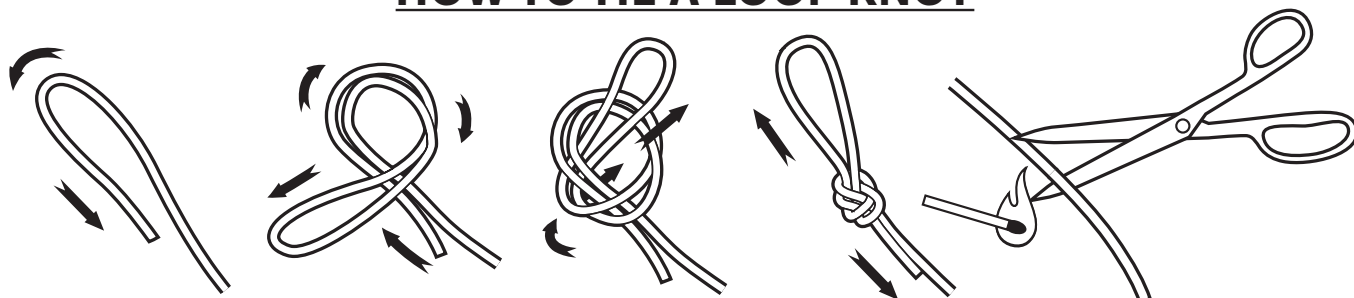

CUT UNDESIRED LENGTHS (OPTIONAL). FLAME TREAT ENDS OR CUTTING AREA WITH MATCH OR LIGHTER TO KEEP CORD FROM FRAYING. USE CAUTION WHEN WORKING WITH FIRE.