



ROLL AWAY POLE ASSEMBLY INSTRUCTIONS

UNITED VOLLEYBALL SUPPLY, LLC.
14615 NE 91ST ST, BLDG B,
REDMOND, WA 98052 • 1996-2007 ©
VOLLEYBALLUSA.COM
PH: 1-800-494-3933
FAX: 425-827-2230

ASSEMBLY INSTRUCTIONS Athletic Standard

Step 1- Insert the $\frac{1}{2}$ " x $2\frac{1}{2}$ " hex bolt into the nut on the base sleeve ONLY A FEW TURNS.

Step 2- Insert pole into base sleeve until the hole in pole aligns with the hex bolt. This bolt is to go thru the hole in the pole and tighten against the far side of the pole.


Step 3- Remove wheel axle and nut. discard tubular spacer sleeve. Insert wheel and reassemble axle and nut.

Step 4- Remove fill plug and fill base with sand or other heavy and easily pouring material other than a liquid. reinsert fill plug and tighten securely.

Step 5- Tip the standard over, slide on the multipurpose ring slides, adjust to desired heights and tighten in place with eye nuts.

Parts List

- 1-Base (A)
- 1-Pole (C)
- 2-Wheels, Axles, Nuts (D)
- 1- $\frac{1}{2}$ " Hex Bolt (E)
- 2-Ring Slides (F)

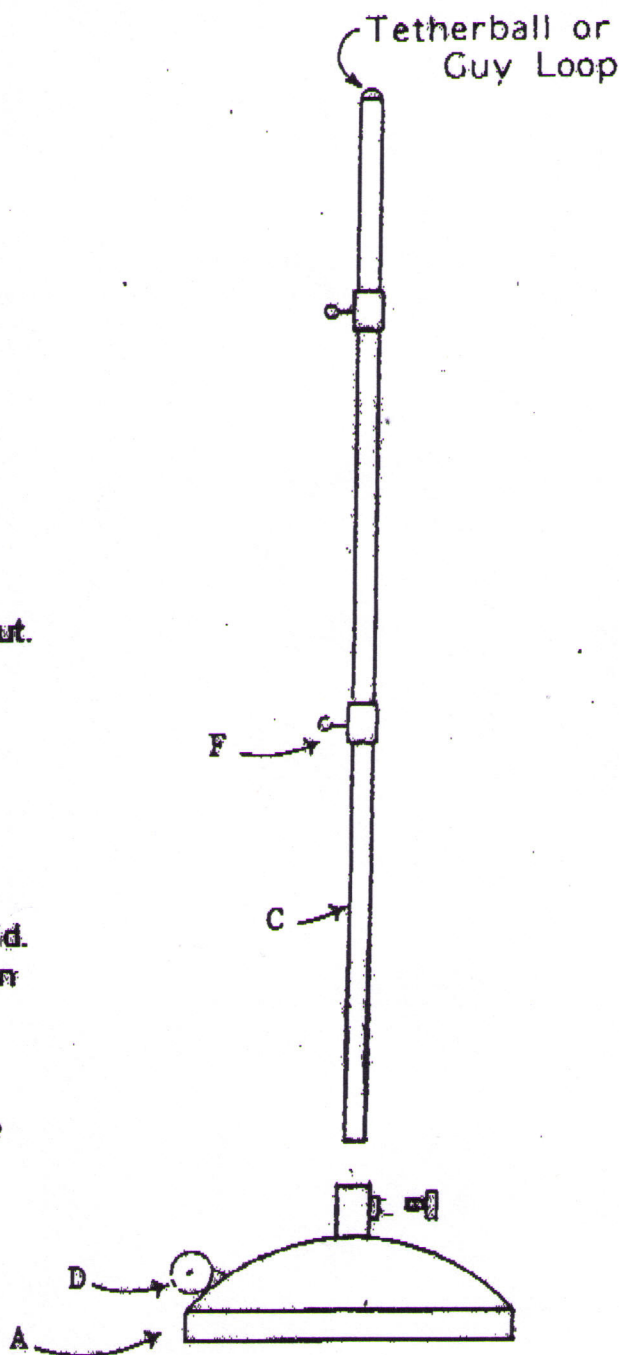

WHEN USING STANDARDS FOR NET SPORTS (I.E. VOLLEYBALL, TENNIS, BADMINTON ETC.) ALWAYS GUY THE TOP OF THE STANDARD TO A FIXED OBJECT.